






BATTERY-LESS REMOTE KILL SWITCH FOR WIZZYBUG & BUGZI

The Kill Switch box is designed to be moved from the Bugzi to the Wizzybug as needed. It is held in place with Velcro and both the 3.5 mm cable and red and black cable can be easily disconnected in order to move the unit.

No batteries are required.

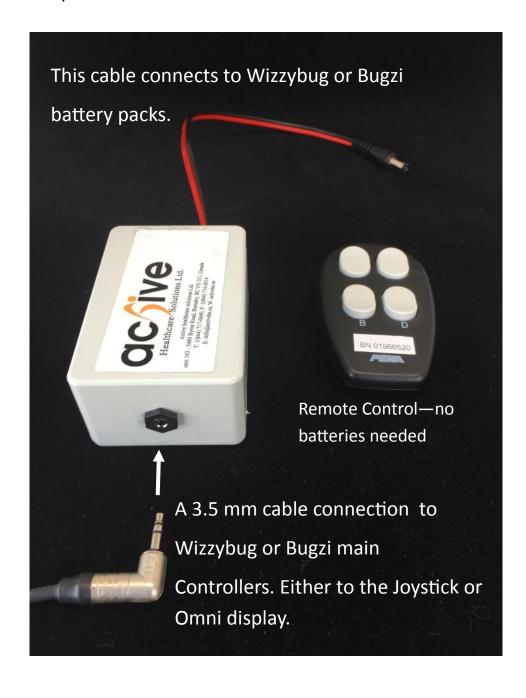



REMOTE CONTROL FUNCTION



Pressing Button B + Button A + Button B quickly in sequence will toggle the chairs on and off as follows:

Button B + Button A + Button B - Turns ON Chair and display.

Then

• Button **B** + Button **A** + Button **B** - STOPS chair—display goes OFF.

Then

• Button **B** + Button **A** + Button **B** - Turns ON Chair and display again.

IMPORTANT: The button sequence will work the same on both the Bugzi and the Wizzybug. There is only one Kill Switch box and it is designed to be moved from one chair to the other as needed. Therefore the remote kill switch can only be used with the chair that has the switch box attached.



BUGZI KILL SWITCH CONNECTIONS





Red & Black Connector Cable from Kill Switch box goes to Bugzi Battery Box as shown.

3.5 mm cable plugs into Kill Switch Box and goes to On/Off Port on the Omni Display as depicted.






WIZZYBUG KILL SWITCH CONNECTIONS



The white 3.5mm cable from the main Joystick plugs into the Kill Switch box as depicted here..

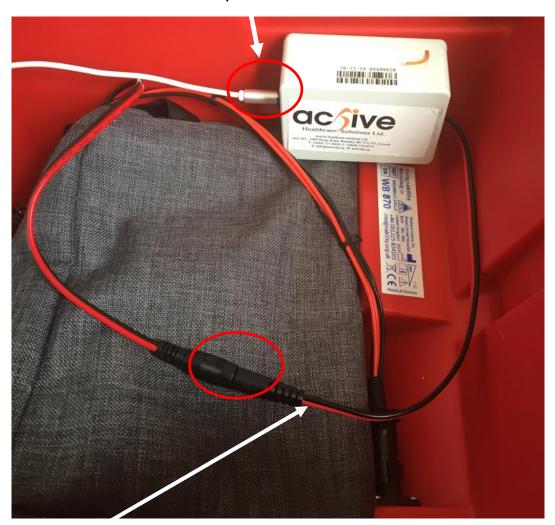

This cable plugs into female end of installed extra battery cable as shown.

Both Wizzybug and Bugzi require adult supervision at all times. The supervising adult is responsible for ensuring the chairs are used safely and appropriately.